


Wherever possible, Ogden City avoids having utility conduit within the excavation zone for a WATER, SEWER or STORM DRAIN line, so that when the utility is repaired, maintained or replaced, there will be little to no chance of the fiber utility being damaged or destroyed by the excavating equipment.

Typically, WATER and SEWER utility lines are located under the roadway, but there are times when either one or both of these services will be closer to the edge of the road or even under a sidewalk. Most often, this will happen on State roads, but will also happen occasionally with some city roads.

EACH DIRECTIONAL BORE JOB WILL BE EVALUATED ON A CASE-BY-CASE BASIS.

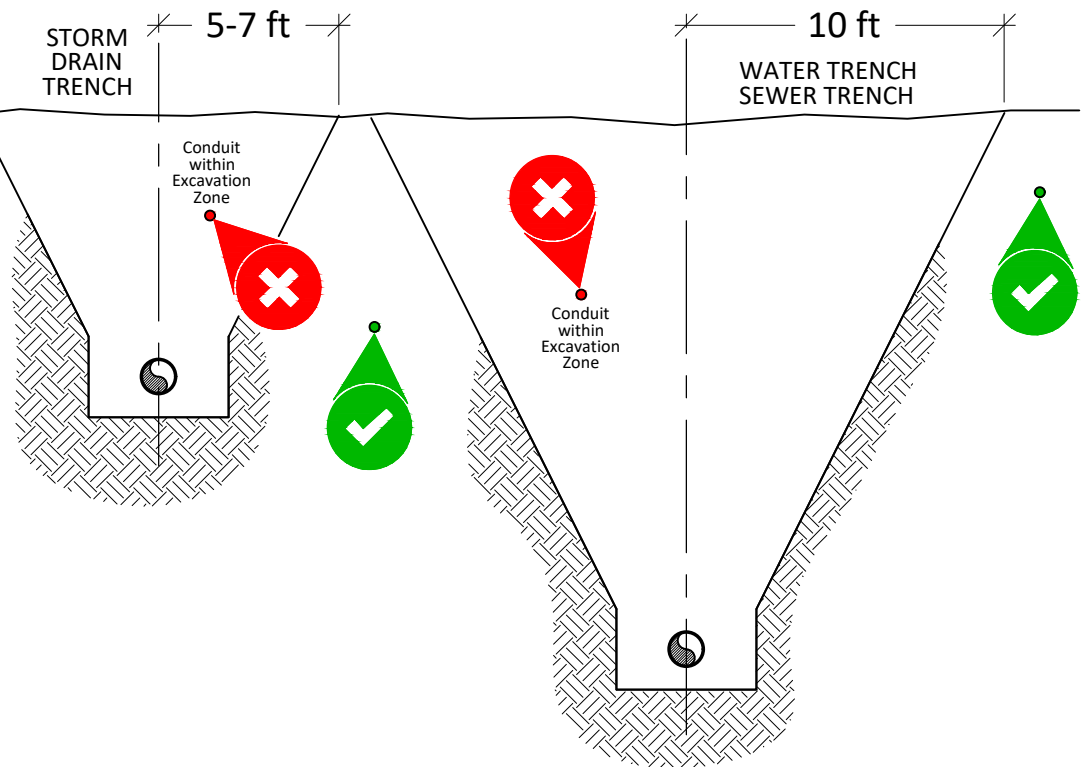

Design Considerations for Underground Fiber near buried utilities

2.2025